

# LED Headlights Assembly Kit for Harley Fat BOB

VST-010101-012



## BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

## IMPORTANT

This LED headlight kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

## INSTALLATION INSTRUCTIONS

Note: Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.

### 1. Products Display



2. Remove the motorcycle original headlamp and mounting bracket, remove the screws of the headlamp housing, remove the original headlamp and disconnect the harness connector. As the picture shows:






# LED Headlights Assembly Kit for Harley Fat BOB


VST-010101-012



3. Install the new headlamp into the protective housing, clip the waterproof plug on the headlamp harness onto the outlet hole of the protective housing, and then install the headlamp pressure frame. As the picture shows:

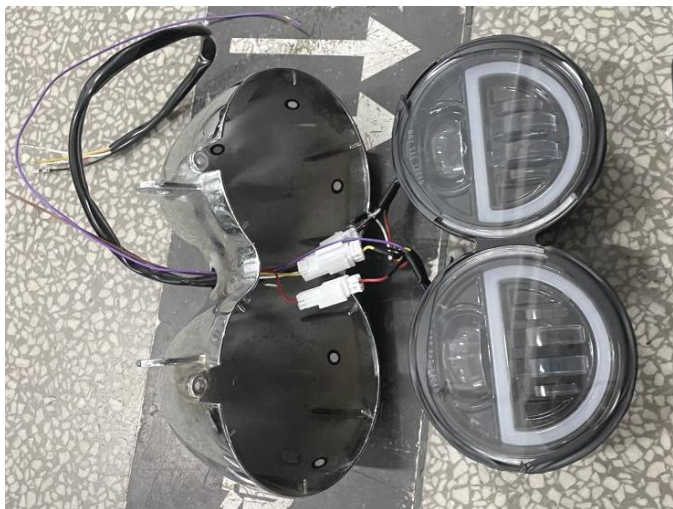

4. Install the new headlamp on the motorcycle, adjust the angle of the headlamp, and then tighten the screws of the mounting bracket. The harness connector of the new headlight needs to be inserted by the owner according to the color sequence in the picture. Connect the plug-in with the overall harness after completion. As the picture shows:

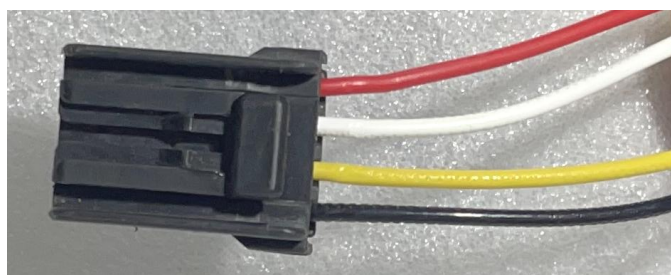

5. Headlamps with Turn signal function need to combine the Turn signal lamp harness with the original motorcycle Turn signal harness. First, break the left and right harnesses skin of the




# LED Headlights Assembly Kit for Harley Fat BOB

VST-010101-012



original Turn signal lamp, respectively connect the Turn signal function harnesses on the headlamp and insulate them. As the picture shows:

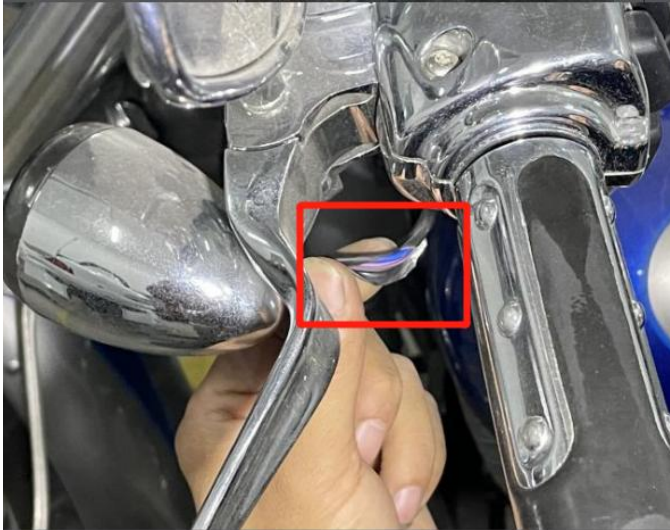

## Notice:

1. The purple line of left turn is broken the line skin and connected to the purple line on the headlight
2. The brown line of right turn is broken the line skin and connect the brown line on the headlamp

6. Installation finished.



**Note:** Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.