

LED Headlight Kit for Fat Bob Harley Davidson Motorcycles

VST-010101-010



BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

IMPORTANT

This LED HEADLIGHT KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

INSTALLATION INSTRUCTIONS

Note: Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.

1. Kit Contents




2. First unplug the harness plug-in of the original headlight, and then unscrew the screw fixing the iron housing of the headlight for standby.



3. First install the iron bracket in the product accessory bag on the back shell of the LED headlight, and then connect one end of the supporting adapter wire with the plug-in on the LED headlight.

LED Headlight Kit for Fat Bob Harley Davidson Motorcycles

VST-010101-010

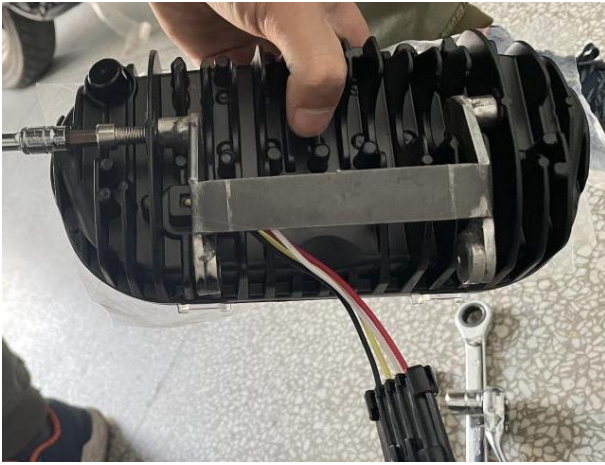

4. Installation finished.



4. Fix the LED headlight with bracket in the position of the original headlight with outer hexagon screws, adjust the LED headlight angle, tighten the screw, and then connect the other end of the adapter wire with the vehicle body plug-in.

