LED Headlights for Harley Sportster S 1250

VST-010101-014



BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

IMPORTANT

This LED Headlight is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

INSTALLATION INSTRUCTIONS

Note: Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.

1. Products Display



2. First unscrew the screws on the small protective cover under the dashboard, then remove the cover, and then disconnect the wire harness connectors for the turn signal lights on the left and right sides of the original motorcycle. As the picture shows:





3. After disconnecting the wiring harness of the original motorcycle headlight from the vehicle wiring harness, remove the original headlight. As the picture shows:



LED Headlights for Harley Sportster S 1250

VST-010101-014







4. Install the original headlight bracket onto the new headlight, then assemble the new headlight onto the motorcycle and secure it with the original motorcycle screws. Then connect the headlight wiring harness to the entire motorcycle wiring harness, and connect the turn signal light wiring harness of the headlight to the turn function wiring harness on both sides respectively. As the picture shows:








LED Headlights for Harley Sportster S 1250

VST-010101-014



5. Installation finished.



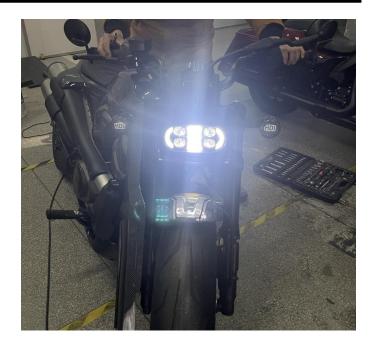

Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.