

LED Vent Turn Signal Lights for Harley Road Glide

VST-010102-005



BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

IMPORTANT

The LED Vent Turn Signal Lights are exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

INSTALLATION INSTRUCTIONS

Note: Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.

1. First remove the screws around the windshield and the screws on the sides of the front turn signal bracket, as shown in the picture:



2. Remove the audio covers on both sides of the front of the vehicle, and unscrew the screws inside the audio that secure the front front protective cover. Remove the front instrument cover, disconnect the wiring harness connector of the turn signal inside, unscrew the screws securing the edge of the front front protective cover, and take off the front decorative cover, as shown in the picture:



LED Vent Turn Signal Lights for Harley Road Glide


VST-010102-005



3. Remove the crescent-shaped decorative parts on both sides of the original headlights, unscrew the screws that fix the headlights, disconnect the plug-in, take off the original headlights, and use the removed screws for use, as shown in the picture:




4. Install the decorative lights on both sides on the removed headlights, the wiring harness plug-in on the headlights are connected to the plug-in on the decorative lights, and the plug-in at the other end of the decorative lights are connected with the original vehicle wiring harness plug-in. As shown in the picture:

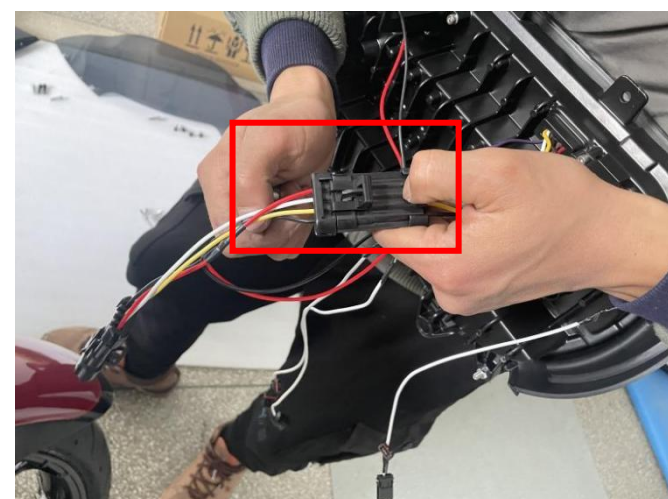

LED Vent Turn Signal Lights for Harley Road Glide

VST-010102-005

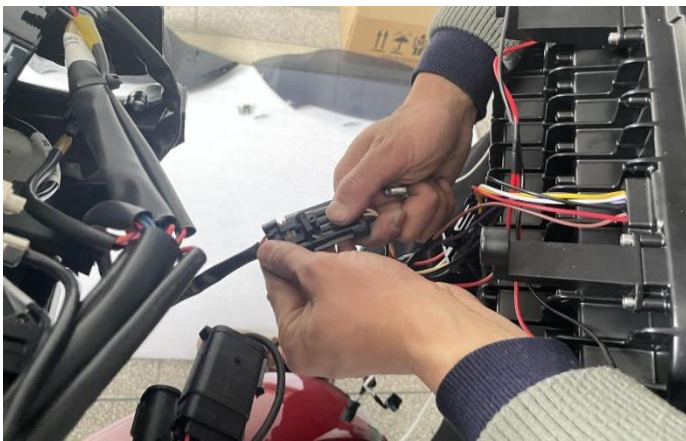

5. Install the headlights with the wiring harness back on the vehicle again. When docking the steering function wiring harnesses of the decorative lights on both sides, it is necessary to connect one of the wiring harnesses to the vehicle wiring harness first. Then start the vehicle and turn on the steering switch. Check whether the left and right steering function of the decorative lights is normally turned on. If the left and right functions are reversed, replace the other wiring harness and test again, as shown in the picture:

6. After the lights are installed, you can replace the previously disassembled accessories and the front trim cover, as shown in the picture:



LED Vent Turn Signal Lights for Harley Road Glide

VST-010102-005



7. Installation finished.

