

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

IMPORTANT

This Mid Frame Air Deflector is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.



INSTALLATION INSTRUCTIONS

Note: Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.

1. Take out the screws and cylindrical nuts in the accessory bag, install them on the heat insulation pad for later use, as shown in the picture:



2. In the place where the heat insulation board is installed, install the steel clip in the car body, and then install the heat insulation board and fix it with screws. On the other side, follow the same steps, as shown in the picture:

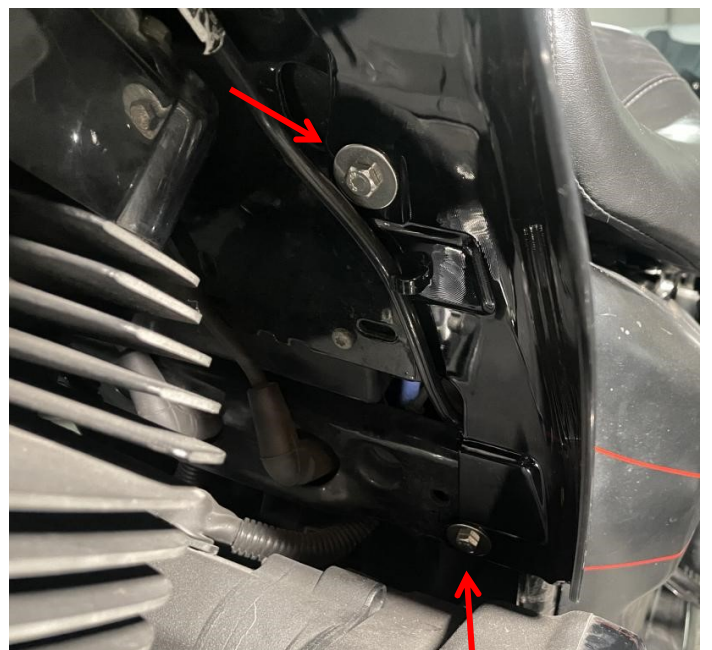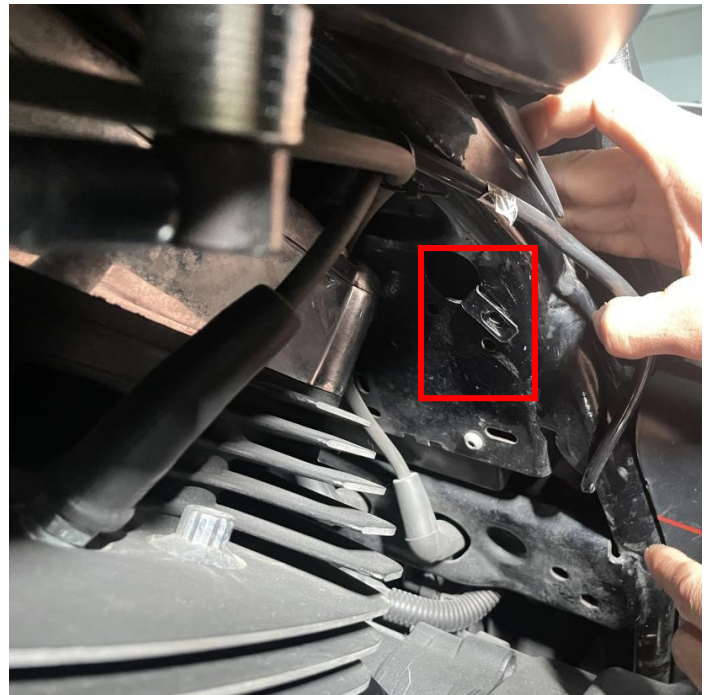

Mid Frame Air Deflectors for Harley Davidson

VST-010103-009



3.installation finished.

