Headlight Fairing Cover for Harley Sportster



BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

IMPORTANT

This headlight fairing cover is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

INSTALLATION INSTRUCTIONS

Note: Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.

1. Products and accessories



#1 bracket



#2 bracket





2. Before installing the cover, you need to install the #1 bracket to the cover first, as shown in the picture:

Headlight Fairing Cover for Harley Sportster









3. Remove the instrument display of the original motorcycle, disconnect the rear plug-in, and unscrew the 2 screws fixed on the original headlights, as shown in the picture:








4. Screw the #2 bracket to the headlight bracket, as shown in the picture:

Note: #2 Bracket needs to pass an aluminum post on the screw before installation.

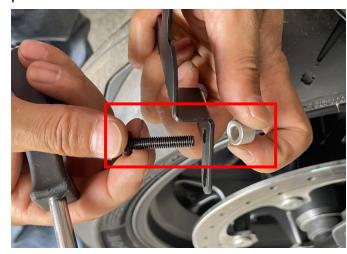


Headlight Fairing Cover for Harley Sportster







5. Snap this cover onto the #2 bracket and screw it in from the back. Then put the instrument display back in its original position, as shown in the picture:

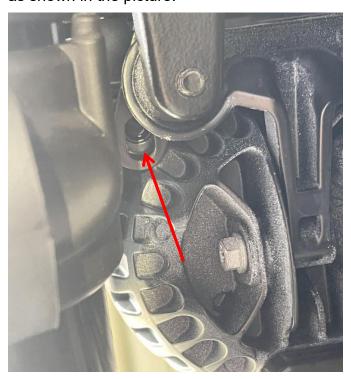





6. Installation finished.

