

# Headlamp Bezel Kit for Harley Street Glide

VST-010103-033



## BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

## IMPORTANT

These headlamp bezel kit are exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.


## INSTALLATION INSTRUCTIONS

Note: Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.

1. Pictures of products and accessories.



2. Remove the headlamp decorative bezel of the original and the headlamp pressure ring inside first, and then disconnect the wiring harness plug-in of the headlights. (the removed screws should be placed for spare) as shown in the picture:

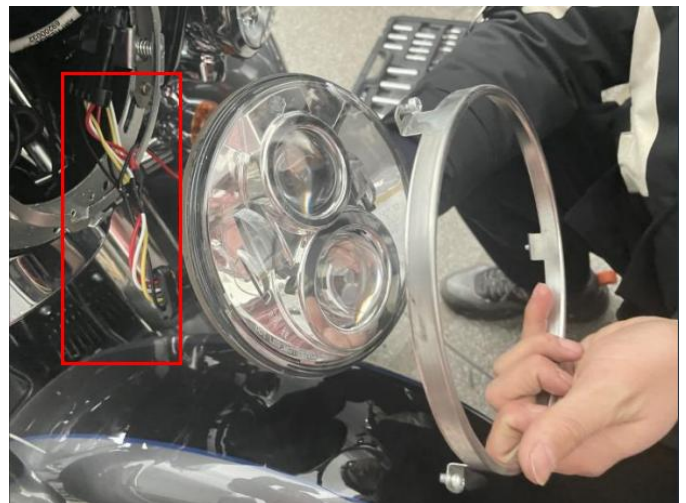

# Headlamp Bezel Kit for Harley Street Glide


VST-010103-033



3. First, use the original car screws to fix the 2 semi-circular brackets in the accessories on the headlight bracket (a rubber ring needs to be put on the bracket in advance before installation). Then connect the wiring harness inserts on the attached headlight frame to the original car wiring harness inserts and the wiring harness inserts on the headlights. Third, put back the original headlights. Finally, tidy up the excess wiring harness and fix the decorative frame of the headlight with light screws, as shown in the picture:



Note: There are 2 protruding ball head ejector rods on the decorative frame of the headlight. During installation, the ejector rods need to pass through the 2 rubbers on the semi-circular bracket for repair.

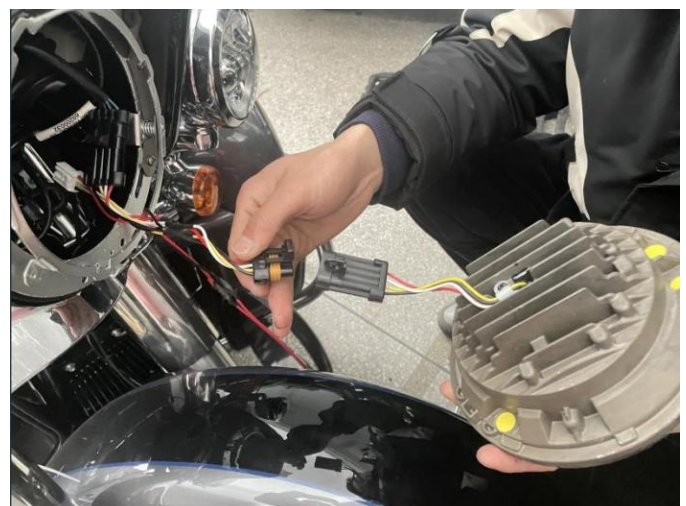

# Headlamp Bezel Kit for Harley Street Glide

VST-010103-033



4. Installation finished.

