

Lower Vented Leg Fairings with Glove Boxes for Harley Street Glide

VST-010103-038



BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

IMPORTANT

These lower vented leg fairings with glove boxes are exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

INSTALLATION INSTRUCTIONS

Note: Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.

1. Products Display



2. Remove the M6*16 hexagon socket head cap screws and M6 spacers that fix the rear case, and keep the screw spacers for spare. As shown:

Lower Vented Leg Fairings with Glove Boxes for Harley Street Glide

VST-010103-038



3. Install the leg guard to the front bumper, fix the upper position with iron clamps and two M6 locking nuts, and fix the upper position with stainless steel rubber clamps and 1 M6*25 socket head cap screw, M6 flat washer and M6 locking nut. As shown:




4. Use M6*16 socket head cap screws and M6 spacers to fix the rear case. As shown:



Lower Vented Leg Fairings with Glove Boxes for Harley Street Glide

VST-010103-038

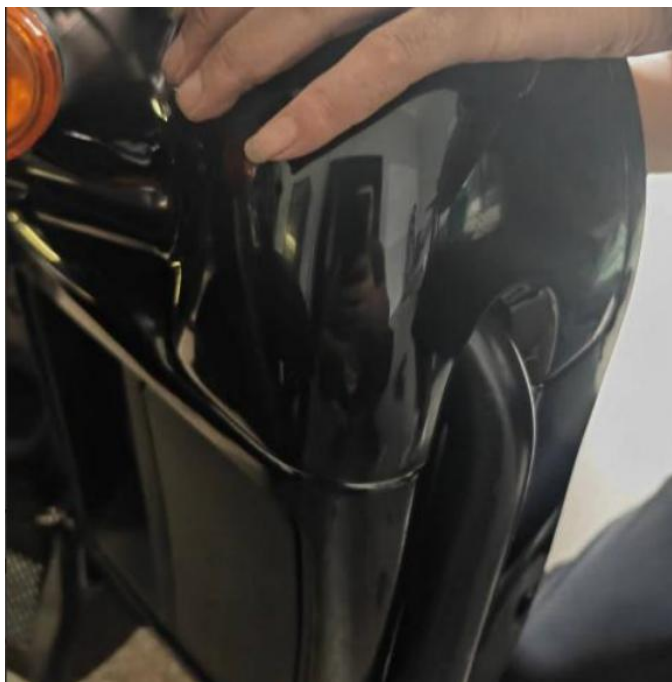

5. Installation finished.

