

Lower Vented Leg Fairings with Speaker Boxes Pods for Harley Street Glide

VST-010103-039



BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

IMPORTANT

These lower vented leg fairings with speaker boxes pods are exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

INSTALLATION INSTRUCTIONS

Note: Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.

1. Products Display



2. Remove the speaker frame with a Phillips screwdriver, keep 8 self-tapping screws and spacers for spare. As shown:



3. Remove the M6*16 hexagon socket head cap screws and M6 spacers that fix the rear case, and keep the screws and spacers for spare.

Lower Vented Leg Fairings with Speaker Boxes Pods for Harley Street Glide


VST-010103-039



4. Install the leg guard to the front bumper, fix the upper position with iron clamps and two M6 anti-loosening nuts, and use stainless steel rubber clamps and 1 M6*25 socket head cap screw, M6 flat washer and M6 anti-loosening Nut fixing the lower position. As shown:


Lower Vented Leg Fairings with Speaker Boxes Pods for Harley Street Glide

VST-010103-039

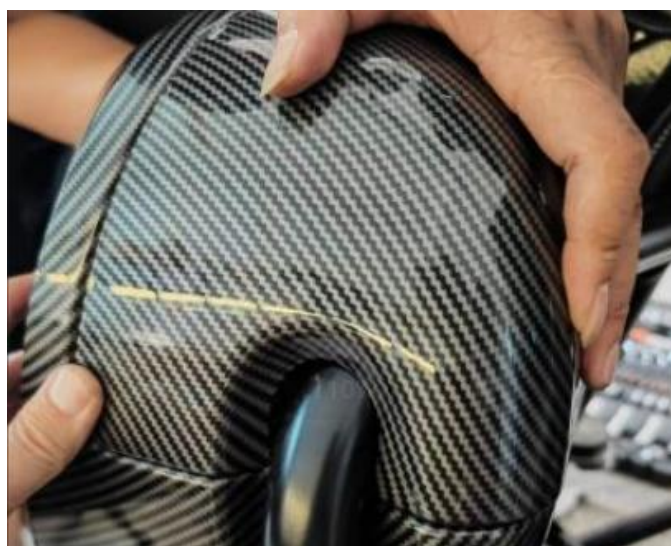

5. Use M6*16 socket head cap screws and M6 spacers to fix the rear case. As shown:

6. Install the speaker frame with 4 self-tapping screws and spacers. As shown:

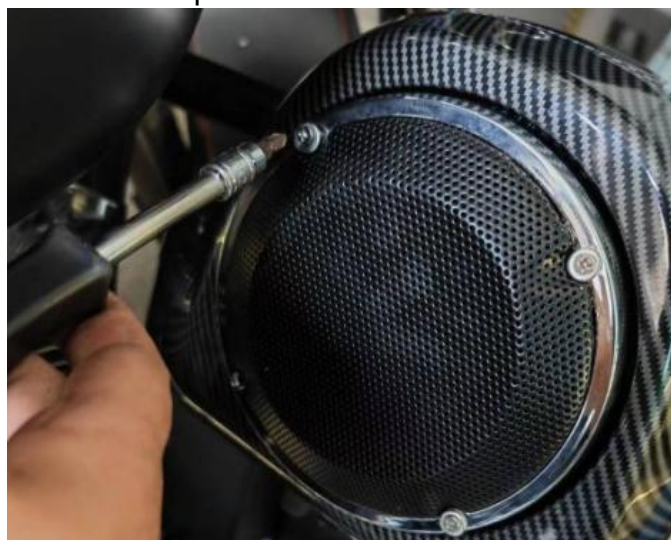

Lower Vented Leg Fairings with Speaker Boxes Pods for Harley Street Glide

VST-010103-039



7. Finished installation.

