

Shock Guard Trim Panel for Harley Sporster S 1250

VST-010103-048



BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

IMPORTANT

This shock guard Trim panel is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

INSTALLATION INSTRUCTIONS


Note: Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.

Tools Required:

- ① Torx screwdriver
- ② Wrench



1. Products Display

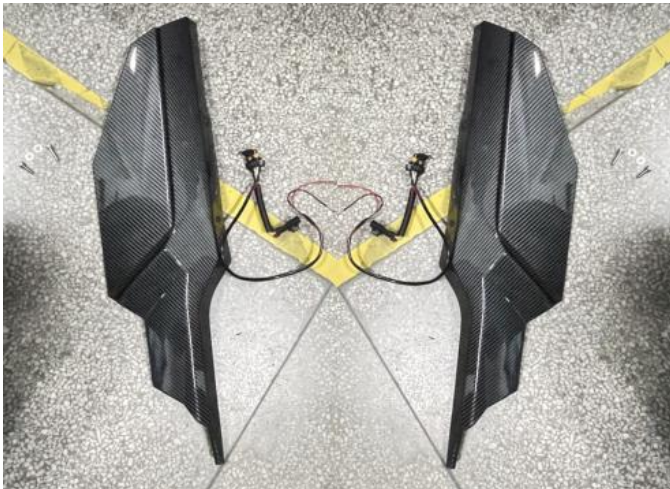

2. First unscrew the screws on the front fender of the original motorcycle, then install the Shock Guard Trim panel to the original shock absorber of the motorcycle, and finally fix it with the screws in the Package (the other side installation is the same)


Note: The screw holes on the Shock Guard Trim pane need to be aligned with the screw holes on the front fender bracket to facilitate

screw fixation. As the picture shows:




Shock Guard Trim Panel for Harley Sporster S 1250

VST-010103-048

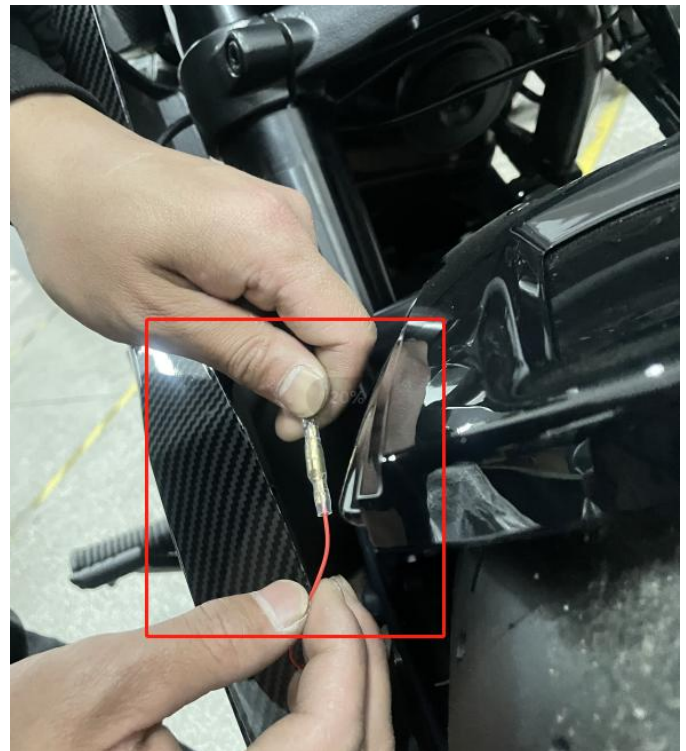

4. Installation finished.

3. Disconnect the original headlamp harness connector first. Then use the matching adapter wire for the shock guard trim panel to reconnect the original headlamp harness and the entire motorcycle harness, and then straighten the four extension wires on the adapter wire to the both sides of the shock guard trim panel, opposite the corresponding color harness on the shock guard trim panel lamp. Finally, just reorganize the wiring harness. As the picture shows

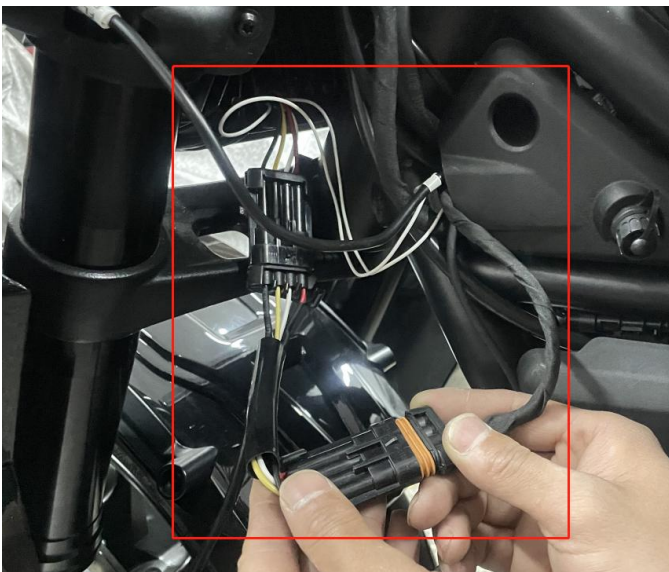

Shock Guard Trim Panel for Harley Sporster S 1250

VST-010103-048



Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.