

Rear Fender With LED Lights for Harley CVO

VST-010103-033



BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.


IMPORTANT

These rear fender with LED lights for Harley CVO are exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

INSTALLATION INSTRUCTIONS

Note: Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.

1. Remove the original vehicle cushion and saddlebag on both sides. As shown:

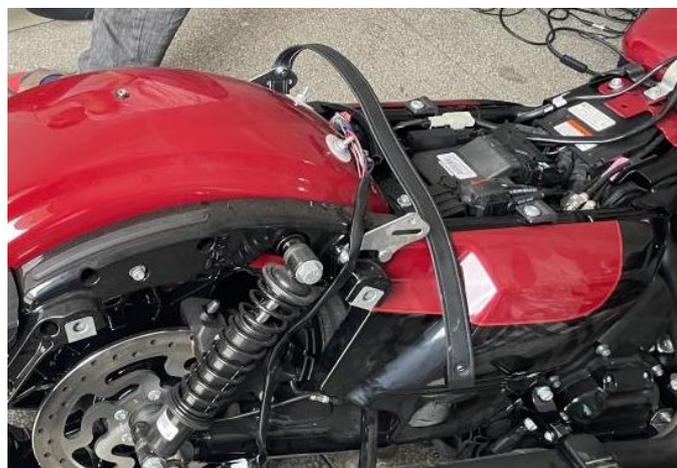


2. Remove the overall fender of the rear wheel of the original vehicle. As shown:



Rear Fender With LED Lights for Harley CVO

VST-010103-033

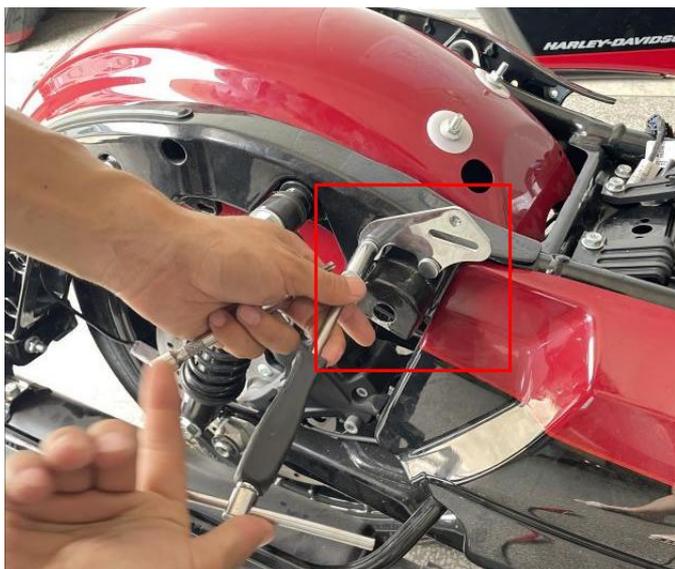

4. Install the license plate light bracket with lights and the tail lights on both sides to the fender. (Put the wire harness through the rubber plug before installation). As shown:

Note: The license plate on the original vehicle needs to be removed and installed on the new license plate light bracket.



3. Remove the license plate and turn signal bracket from the overall fender. As shown:



Rear Fender With LED Lights for Harley CVO


VST-010103-033




5. First, disconnect the wire harness plug-in under the original vehicle seat cushion, use the product matching adapter wire, and reconnect according to the corresponding plug-in plug. Then, pulled remaining 2 extension wires to the rear wheel and connected with the wire harnesses on the tail lights on both sides. (After docking, you need to start the vehicle first, turn on the turn signal switch, and check whether the left and right steering functions of the tail lights are normal. If the steering function is reversed, replace the 2-side tail light wiring harness and re-connect it again). Finally, install the fenders and other Accessories. As shown:

Rear Fender With LED Lights for Harley CVO

VST-010103-033

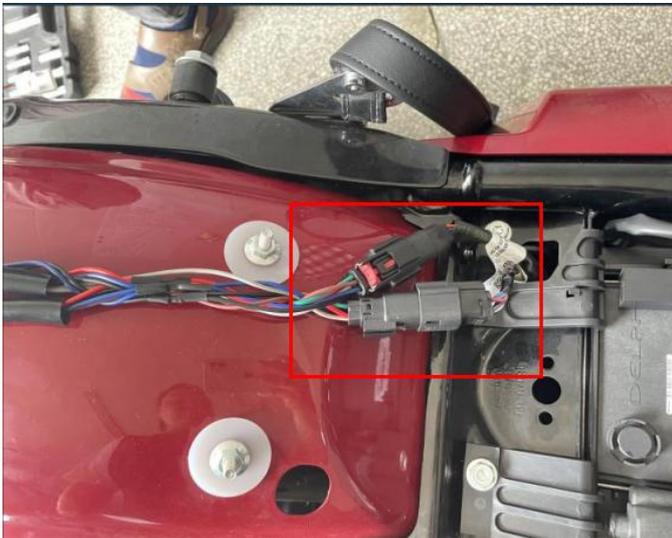

6. Follow the picture, if the original vehicle antenna is installed on the rear of the vehicle, you need to grind an arc at the edge of the taillight before screwing the antenna back on. (The arc please refer to the hole template picture. first, cut out the template paper. Then, paste it on the place where the hole needs to be opened. Finally use a polisher to follow the line make a hole). If the antenna in other positions, can be ignored this step. As shown:

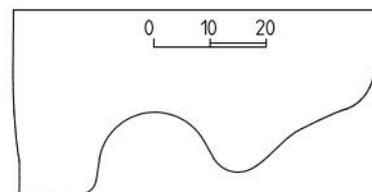

Rear Fender With LED Lights for Harley CVO

VST-010103-033



7. Installation Finished!

