

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

IMPORTANT

This side fairings spoiler protector covers is exclusively designed for your motorcycle. Please read the installation instructions thoroughly before beginning. Installation is easier if the motorcycle is clean and free of debris.

INSTALLATION INSTRUCTIONS

Note: Shift motorcycle transmission into "PARK". Turn key to "OFF" position and remove from motorcycle.

1. Products Display:



2. First remove the front plastic parts by removing the left and right eight screws and take off the front fairing. As the picture shows:




3. Attach iron bracket A (see illustration in the product display) with 2 M8*25 hexagonal screws, 2 M8 flat washers, and 2 M8 U-clamps in the position shown in the illustration:



4. Install the left and right ends of the iron bracket A (refer to the product display diagram) in the position as shown in the picture with 2 British M6*25 hexagon socket head cap screws and 2 M6 flat washers:



5. Secure bracket L and bracket R to the frame and bracket A using 4 M6*25 round head screws and 4 M6 flat washers (refer to the product display drawing for bracket numbers). As the picture shows:

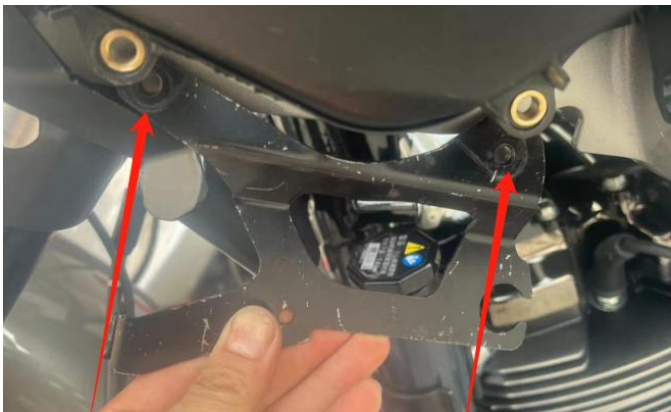

6. Restore the motorcycle's front hoghead cover to its original state. As the picture shows:



7. Finally, install the left and right plastic plates on the left and right brackets. Installation is complete. As the picture shows:



Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.